


The Jorba - TOWEL RAIL FOR COLUMN


This cleverly designed towel rail is a beautiful, functional, high end accessory for Eskimo's Column radiator. Allowing you to apply a rail, or rails, when needed. Without ugly fixings, without difficulty, 'The Jorba' fits to any size Column radiator. A stunning open ended form that is both beautiful and practical.



Height (mm) - 50mm
Length (mm) - 465mm
Depth (mm) - 97mm

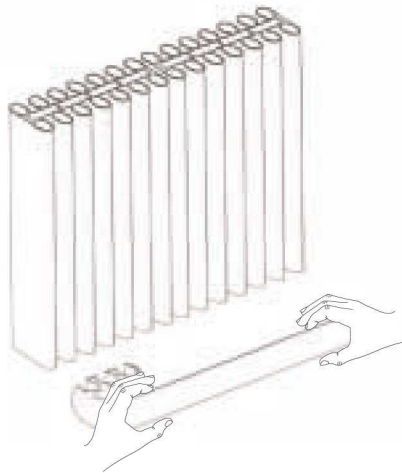

As with puzzle pieces, carefully position the Column towel rail under the bottom base of the radiator. Connecting the rail's elliptical gaps with the radiator's elliptical tubes.

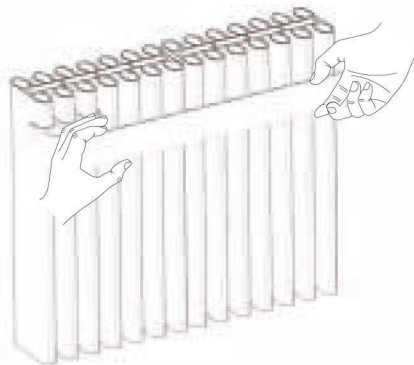

Carefully slide the rail upwards to the hanging position you desire. Due to 'The Jorba's' tapered form the rail will grip Column's tubes in all the right places. You are now ready to hang your towels.

Jorba Towel Rail Fitting Instructions

Component	Qty
A Jorba Towel Rail	1
B M4 Nylon tipped grub screws (pre fitted)	2
C Allen Key M4	1

Fitting Instructions

NOTE: This product will only fit an Eskimo Column radiator

Carefully position your Jorba towel rail at the bottom of the Column radiator – due to the decorative cap it will not slide on from the top of the Column radiator. The Jorba is reversible so can be positioned on either the left or right hand.

The end of the Jorba overhangs the end of the radiator – line the first oval cavity on the Jorba up with the first oval tube on the Column on either the left or right.

It will be easier to fit and you will not risk damaging the product if you can decide on the required position of the Jorba(s) before you fit it.

Carefully slide the Jorba up the Column radiator to the desired position – if you lift the front it should slide freely.

If you do find it slightly tight at first at the bottom give it a tap with palm of your hand – there may be an additional thickness of powder from the powder coating process that could cause this.

2 x M4 nylon tipped grub screws are pre-fitted. These require tightening once you have slid the Jorba into the required position using the allen (hex) key provided turning the allen key clockwise to tighten. You will need to hold the Jorba with one hand while tightening the allen key with the other so it may be easier if you have an assistant available to hold the rail whilst you tighten the grub screws.

Tighten both grub screws evenly until the rail no longer rocks - do not overtighten or they could mark the radiator and should you ever wish to re-position the Jorba these marks would be visible.